

CS100 Quick Programming Guide

You should only need to make adjustments to settings of the CS100 if you are using cup sizes other than the 8oz china / 9oz paper for which the machine is already pre-programmed, or if you wish to adjust the coffee strength. This guide is designed to help make the adjustments to *coffee strength, coffee volume, milk quantity and hot water quantity* if they are necessary.

Make your machine ready for use by following the *'AT THE START OF THE DAY'* section in the **QUICK REFERENCE GUIDE**.

You are now ready to make adjustments to the CS100 settings.

1. Open the flap above the steam arm.
2. Press and hold down the **PROG** Button until you hear a bleep.
3. The first LCD display will show ADJUST COFFEE QTY - SELECT PRODUCT. This will allow you to adjust the strength of the coffee.
4. Press the Cappuccino button and the LCD will show:
- _ _ _ _ _ 1 _ _ _ +
5. You can adjust the strength of the coffee by pressing the + or ó buttons.
6. Save the new setting by pressing **PROG**
7. The display will now give you the opportunity to select the grinders. Unless you are using different coffee in each hopper leave the setting at <50% >50%.
8. Press **PROG** again to save.
9. Repeat the process for the other coffee buttons pressing **PROG** to save the new setting each time.
10. If you need to increase or decrease the volume of coffee being dispensed to your cups, press the + button twice, this will take you to ADJUST WATER QTY - SELECT PRODUCT.
11. Press the Cappuccino button and increase or decrease the amount of coffee being dispensed. The adjustment is made in 5ml steps. Press **PROG** to save your new setting and repeat with the other coffee buttons as necessary.
12. If you need to increase or decrease the foamed milk quantity press + once and the display will show ADJUST MILK QTY - SELECT PRODUCT.
13. Press the Cappuccino button and the display will show CAPPUCCINO - 12 SEC. Adjust the amount of foamed milk delivered with the + or ó buttons. Press **PROG** to save the setting. If you need to adjust the Latte and Milk Foam buttons repeat the procedure.
14. If you need to increase or decrease the hot water delivery press + once. The display will show HOT WATER PORTION - PRESS FOR HOT WATER - ENOUGH HOT WATER?
15. Place your cup under the Hot Water / Steam Wand.
16. Press the Hot Water button and press it again when you have sufficient water in the cup.
17. Press **PROG** to save.

You have now completed the adjustments to your machine settings. Press **EXIT** to come out of the programming section. Your machine will now show select product.

If you need to make any further adjustments repeat the necessary stage as above. If you require any help, telephone our Technical Department on 01283 222200.