

Quick Reference “Daily Cleaning”

This Quick Reference does not replace the User Manual!



Consider the Overview of Cleaning Interval Schedule in chapter “Customer care” in the User Manual. Prior to the first cleaning read the User Manual, Customer Care chapter under sub-heading: “General Cleaning”, “Weekly Cleaning” “Regular Cleaning” and “Descaling”.

1

Touch clear pad.

2

Additional pads are activated.
Touch **MENUE** pad.

3

Touch (Customer Care).

4

The Menu (Customer Care) appears with three options.
Touch **Cleaning Prog.**

5

Touch **switching off**

6

Touch **Start**
Cleaning Program sequence begins.

7

Open bottle of Special Cleaner.
Mix 5 ml cleaner with 0.3 l warm water in a container. Insert milk hose.

7.1

When Step 7 completed touch **Yes**.

8

Cleaning runs for 30 secs.

9

For water rinse fill with 0.3 l of clear, cold water. Insert milk hose.
Touch **Yes**.

10

Rinse runs for 30 secs.

11

Display with foamer cleaning reminder appears.
For foamer cleaning see next page, steps A to C. Touch **OK**.

12

Touch **Start**
Machine cleaning starts.

13

Empty grounds container and drip tray. See steps 14 to 17.
If not connected to mains drainage place receptacle (2 litres) underneath.

Continue on reverse side.

14



Push combi spout fully upwards and lift the adjustable screen.

15




Remove and empty grounds container.

16




Pull drip tray out and empty. Then replace drip tray. Obligatory with machines without mains drain connection!

17

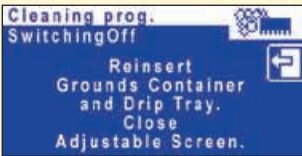


Replace grounds container and close adjustable screen.

18

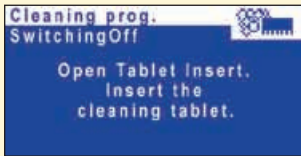


Manual insert is either in the centre between the product containers or in the centre behind the containers.

19

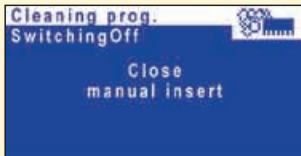


Close manual insert.

20

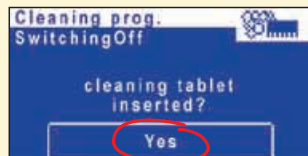


Cleaning tablet inserted?
Touch **Yes**

21

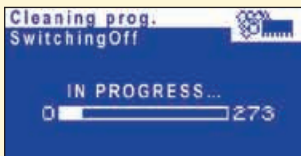


Cleaning runs for approx. 5-8 mins

22

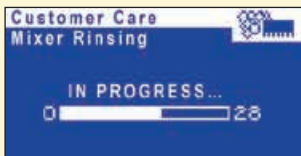


Mixer rinse runs for 30 secs then machine switches off. Cleaning routine ended.

Foamer Cleaning

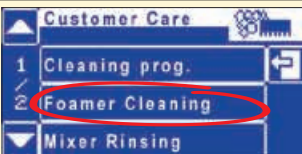

Foamer Cleaning only
On submenu (Customer Care) touch **Foamer Cleaning**.
See steps 6 to 11.

Mixer Rinsing

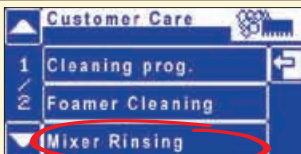

Mixer Rinsing only
On submenu (Customer Care) touch **Mixer Rinsing**.
Mixer rinse runs for 30 secs.

Combi spout cleaning 1 x daily

A



Pull forward the little lever behind the combi spout. Remove combi spout, remove milk hose from milk container and release from combi spout. If a mixer hose is fitted Änderung remove it too.

B



Mix 5 ml Cleaner with 0.5 l warm water in a receptacle. Dismantle combi spout and soak together with milk hose for a minimum of 5 hrs in the cleaner fluid. Parts must be completely immersed. Finally clean all parts thoroughly with a brush.

C



Rinse combi spout and milk hose very thoroughly with clear water so that no cleaner fluid remains. Replace combi spout and hoses after rinsing.

Prior to cleaning switch off at ON/OFF button. Pull out mains plug.